



Wireless and Bluetooth Connection

Wireless Connection

Windows Wi-Fi status icons on your taskbar.

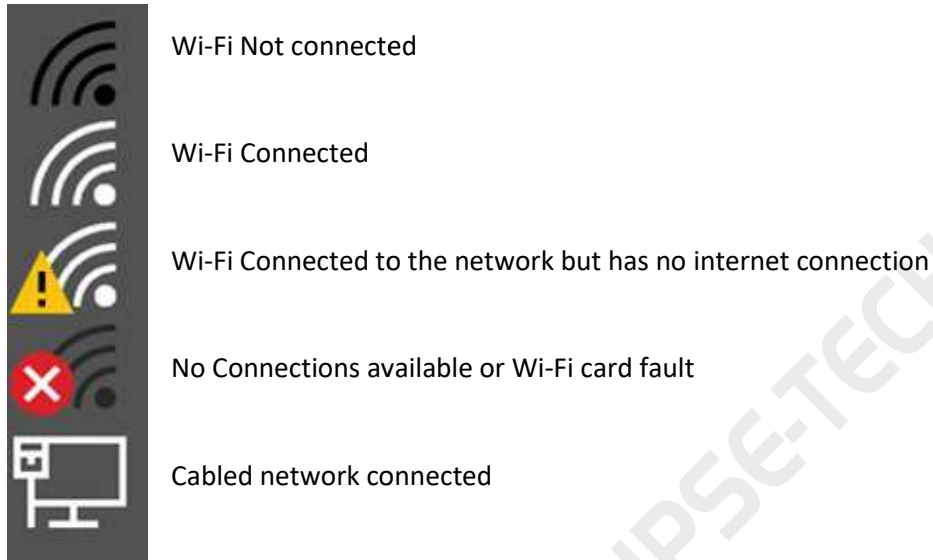

Click on the Wi-Fi icon on your Windows taskbar as shown in the below image. You will now see a popup window with a list of available connection.

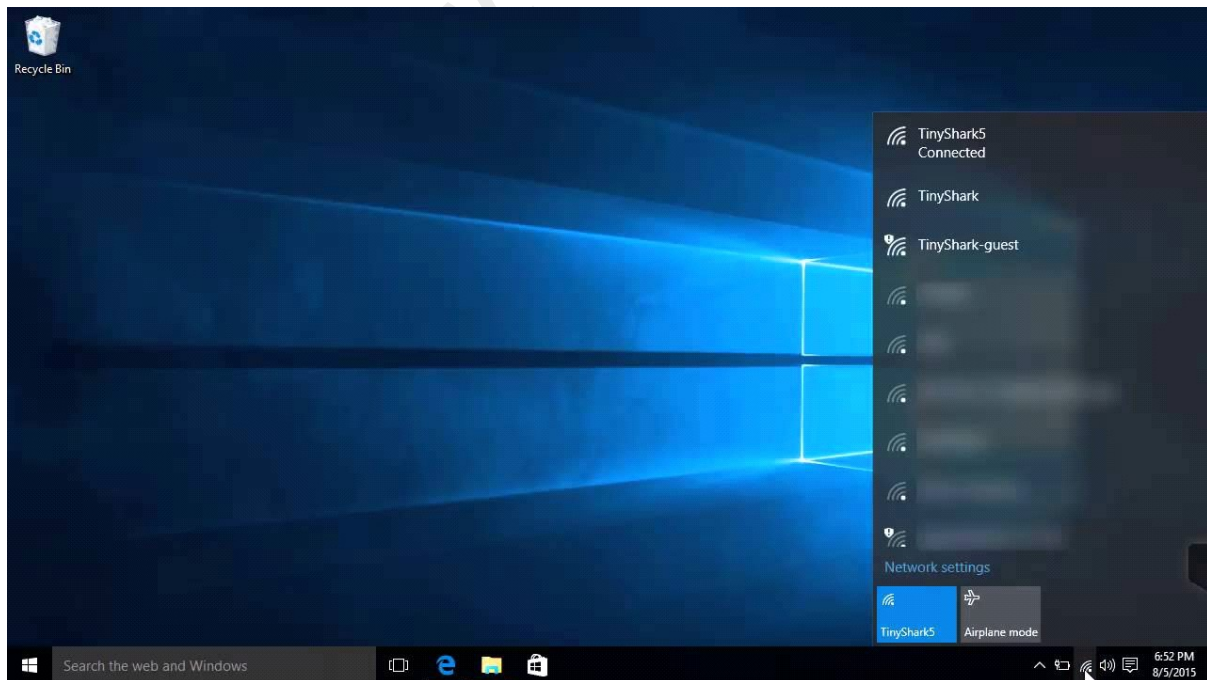


Click on the connection in the list that is yours, click on **connect** and enter your pass key when prompted. You should now have internet connection. You can test this by going onto a web site.

Bluetooth Pairing

In order to set up Bluetooth communication in Jaltest if not previously done, you first need to open Jaltest Software. Make sure that the Jaltest Link is connected to your Eclipse Testpad via the supplied USB cable.

In Jaltest click on the **main menu** button at the top of the page as below and then click on **[Jaltest Link]**.

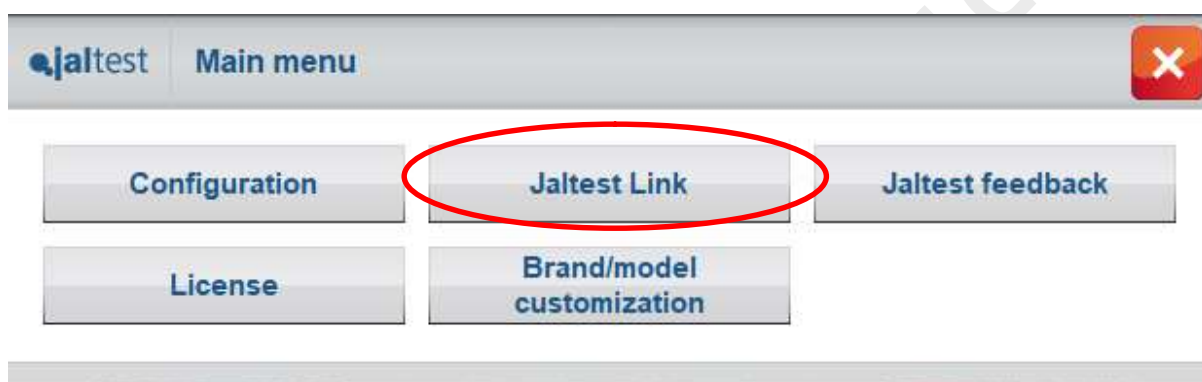

You will now see a box in the middle of the page with some different communication options. Click on the option that reads **Bluetooth**.



Once done, click on [**Connection test**] button, wait for a few seconds. If the Jaltest Link has not been used on your Testpad before a box will appear and ask for the Bluetooth pairing code, enter **1234** and click ok. You should now see the Jaltest Link details (firmware and serial number) in the box as below. You're done.

<input type="radio"/> USB	Connection test
<input checked="" type="radio"/> Bluetooth	
<input type="radio"/> Old Tablet PC	

S/N: P001658278
Firmware: 17.1.1

Should you still be experiencing issues or having difficulty, then please connect your Jaltest Link to your Testpad and be connected to the internet as above and contact the Eclipse IT help desk on 03454 666699 option 2.

NOTES: